

performance will be better under 5G band.)
d. Please pair the receiver and the transmitter again.

6. Features

- Mirror your PC's desktop to your IFP by connecting the transmitter to your PC and running the ScreenShare Pro.
- Support synchronization of audio and video.
- Multiple transmitters are in a ready state quickly switch by pressing the button on the transmitter.

7. Key Specifications


- Operating systems supported: Windows7/8/8.1/10; OSX 10.9/10.10/10.11
- Operation frequency: 2432MHz, 5180 MHz
- Input power: 5V-DC
- Overall power consumption: 2.5 W
- Overall dimensions (LxWxD): 77 mm×178.7 mm×21.3 mm

8. Packing List

Wireless transmitter — 1 pcs
USB receiver — 1 pcs
Operating instruction — 1 pcs



Avtek Share Quick Guide

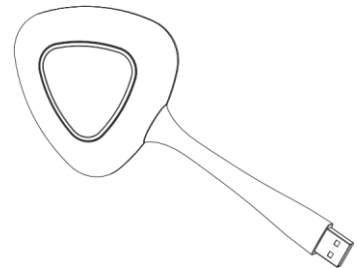

1. Safety Warnings and Precautions

Before using and operating this device, please read thoroughly and comply with the following precautions in order to prevent accidents or mal-operations.

Operating Environment

Do not charge or use the device in dusty or wet conditions, to prevent internal circuit failure.

Keep the device away from heat sources such as an electric heater.

Safety Precaution for Children

This device and its parts may contain some small components, so keep the product out of reach of children to prevent accidents.

Water Precaution

This device is not water-resistant. Keep it dry.

Maintenance

Please contact professional service personnel for maintenance services.

Do not insert any sharp or pointed object into the device. Prevent the device from falls and collisions with other objects, which may cause damages.

2. Statements


a. Intellectual property right statement: The hardware design and software of this product are covered by the patents. Anyone who reproduces this product or the content of the instruction without the authorization of the Company shall assume legal liabilities.

b. This instruction is provided for reference only, and the functions shown in the manual may differ from the actual functions of the product the customers actually purchase and receive.

c. The picture is for reference only. Please subject to the actual product. The Company reserves the rights to improve and change the appearance and design of the product without notice.

d. The actual screen sharing status depends on the real wifi environment and your mobile device's wifi ability, it would be better to cast your screen by using 5G wifi.


3. Connection

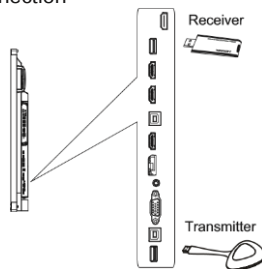

Step 1:

First time use: Connect the transmitter and receiver to the USB ports on your Interactive Flat Panel (IFP) for pairing (after then, there is no need to pair again).

Note: Please make sure that the pairing is based on the figure shown above.

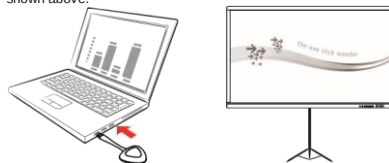

Step 2:

After pairing, connect the transmitter to a USB port on your PC; click to run the ScreenShare Pro (this is required for the first time use; after then there is no need to operate again).



Step 3:

Press the button on the transmitter by following the prompts displayed on your PC to implement screen mirroring.

Notice:

The use of wireless transmitter of your computer, should be able to connect wifi, if not, the wireless transmitter could not work normally.

4. Indicators Status Descriptions

- Blinking: The transmitter is connecting to the IFP.
- Steady on: The transmitter is connected to the IFP and the screening mirroring is set up.
- Low brightness: Mirroring.

5. Basic Troubleshooting

When the systems cannot get connected, please troubleshoot as follows:

- Please check that the ScreenShare Pro runs properly on your IFP.
- Please check that the receiver is correctly connected to the IFP.
- Please check that the hotspot of the IFP. Switch the hotspot to 2.4G if your PC couldn't support 5G band WIFI. (The

4. Sparuj ponownie nadajnik z odbiornikiem.

6. Funkcje

- Przesyłanie obrazu z komputera PC na monitor poprzez połączenie nadajnika i kliknięcie przycisku
- Wsłucha przesłanie obrazu, dźwięku i dotyku
- Współpraca wielu nadajników na raz

7. Kluczowe specyfikacje


- Wspierane systemy operacyjne: Windows 7/8/8.1/10; OSX 10.9/10.10/10.11
- Częstotliwość pracy: 2432MHz, 5180 MHz
- Zasilanie: 5V-DC
- Pobór energii: 2.5 W
- Wymiary: 77 mm×178.7 mm×21.3 mm

8. Zawartość opakowania

Nadajnik USB — 1 sztuka
Odbiornik USB — 1 sztuka
Instrukcja — 1 sztuka



Avtek Share Instrukcja

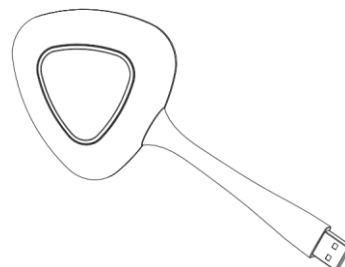

1. Ostrzeżenia

Przed rozpoczęciem pracy z urządzeniem, proszę przeczytać dokładnie niniejszą instrukcję i zachować ją na przyszłość

Środowisko pracy

Nie należy używać urządzenia w zakurzonej lub mokrej przestrzeni.

Trzymaj urządzenie z daleka od źródeł ciepła

Urządzenie oraz jego elementy mogą zawierać małe części. Należy

trzymać je z daleka od dzieci by uniknąć wypadków

Urządzenie nie jest wodoodporne.

Użytkowanie

Nie wkładaj ostrych przedmiotów do urządzenia.

Skontaktuj się z profesjonalną obsługą w razie problemów

Upuszczenie lub zderzenie z innym przedmiotem może spowodować nieodwracalne uszkodzenia

2. Oświadczenia

Oświadczenie własności intelektualnej: urządzenie oraz oprogramowanie są opatentowane. Kopiowanie tego produktu bez

autoryzacji producenta spowoduje akcję prawną.

Instrukcja została stworzona tylko jako pomoc. Funkcje opisane w

instrukcji mogą różnić się od funkcji produktu który klient otrzymał.

Obrazy użyte w tej instrukcji są tylko ilustracyjne.


Mogą pojawić się różnice między instrukcją a produktem.

Producent rezerwuje sobie prawo do ulepszania i zmiany wyglądu

oraz funkcji produktu bez wcześniejszej zapowiedzi.

Funkcjonowanie bezprzewodowego przesyłania obrazu zależy od sieci WiFi oraz możliwości sprzętowych połączonych urządzeń. Dla najwyższej jakości zalecane jest używanie WiFi 5Ghz.

3. Połączenie

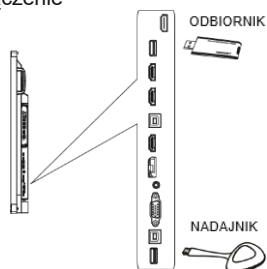

Krok 1:

Pierwsze użycie: Połącz nadajnik oraz odbiornik do portów USB na monitorze interaktywnym by sparować urządzenia. Po pierwszym sparowaniu nie ma potrzeby parowania w przyszłości.

Uwaga: proszę upewnić się, że parowanie jest wykonane jak na rysunku powyżej.



Krok 2:

Po sparowaniu podłącz nadajnik do portu USB komputera i naciśnij ikonę by uruchomić ScreenShare Pro (jest to wymagane tylko za pierwszym razem).



Krok 3:

Naciśnij przycisk na nadajniku i kontynuuj zgodnie z wyświetlanymi informacjami.

Uwaga:

Komputer z którego przesyłany ma być obraz musi posiadać możliwość połączenia z siecią WiFi.

4. Opis wskaźników statusu

- Miganie: Nadajnik łączy się z monitorem
- Stałe światło: Nadajnik jest połączony z monitorem a bezprzewodowe przesyłanie obrazu jest gotowe
- Stałe, lekkie światło: Przesyłanie obrazu.

5. Rozwiązywanie problemów

Jeśli urządzenie nie może się połączyć spróbuj poniższych rozwiązań:

- Sprawdź czy aplikacja ScreenShare Pro działa poprawnie na monitorze.
- Sprawdź czy odbiornik jest poprawnie podłączony do monitora.
- Sprawdź połączenie internetowe na monitorze. Zmień ustawienia hotspot do 2.4Ghz jeśli podłączony komputer nie wspiera połączenia 5Ghz (jakość przesyłania obrazu jest lepsza przy połączeniu 5Ghz)